1(3) DATA SHEET



# Relay M 8

System: TS1000

Part no. 5100080, 5100081

G015077

### General Description

Relay M 8 provides eight programmable relay contacts. Each of these relay contacts provide a potential free change-over contact.

Use Relay M 8 to control units such as sirens, solenoid, flashlight, alarms and ventilation fans.

For details on assembling a system and definitions of common system terms, refer to the Installation Manual.

#### About the datasheet

This data sheet contains product information for the following relay units (1) and (2):



G015078

| ltem | Part name  |  |  |
|------|------------|--|--|
| 1    | PCB module |  |  |
| 2    | Housing    |  |  |

#### Data

| Operating voltage range              | 19-30 VDC   |
|--------------------------------------|---|
| Max. DC load (resistive) per channel | 5 A / 30 VDC  |
| Max. AC load (resistive) per channel | 5 A / 250 VAC   |
| Current consumption (at 24 V)        | 11 mA   |
| Max total current consumption        | 86 mA   |
| Cable terminals                      | 2.5 mm <sup>2</sup>   |
| Operating temperature range          | -40°C to +85°C (Tx)   |
| Weight (with housing)                | 230g  |
| Certified according to               | EN 50155<br>See separate document<br>for approvals and<br>certifications. |

#### Parts Fire SW:

| ltem  | Part name                                    | Part no.    |
|-------|--|-------------|
| 1 & 2 | Relay M 8 module (fully assembled)           | 5100081-02A |
| 1 + 2 | Relay M 8 module<br>(delivered as two parts) | 5100081-01A |
| 1     | Spare part: PCB module                       | 5100080-03A |
| 2     | Spare part: Housing                          | 5100104-01A |

#### Parts Gas SW:

| ltem  | Part name                                    | Part no.    |
|-------|--|-------------|
| 1 & 2 | Relay M 8 module (fully assembled)           | 5100080-22A |
| 1 + 2 | Relay M 8 module<br>(delivered as two parts) | 5100080-21A |
| 1     | Spare part: PCB module                       | 5100080-20A |
| 2     | Spare part: Housing                          | 5100104-01A |

The specifications described herein are subject to change without notice.

Data sheet no. 5100080, 5100081\_Relay M 8\_T\_EN\_2016\_A



DATA SHEET 2(3)

### Settings

The module is identified by a physical address on the Backbone Bus. The address is set with an 8-pole DIP switch.

The DIP switch value follows the binary system. The address no. can be set using DIP-switch poles 1 to 7.



#### DIP 8



#### NOTE!

Depending on if the module Relay M 8 is used in a fire or gas detection system, set DIP switch 8 according to the table below.

System DIP switch 8

**Fire** detection system OFF **Gas** detection system ON

#### Connections



| RELAY M 8<br>ADDRESS:                       |   |   |   |   |   |   |   |
|---|---|---|---|---|---|---|---|
| 1   | 2 3 4 5 6 7 8                               |   |   |   | 8   |   |   |
| RELAY 230VAC/Max. 5A<br>PROGRAMMABLE OUTPUT |
| 230/5A                                      |
| 12 11 14                                    | 21 22                                       | 31 32                                       | 4 4 4                                       | 54<br>51                                    | 61 62                                       | 74  | 82 81                                       |
| G002263                                     |   |   |   |   |   |   |   |




3(3) DATA SHEET

### **Indicators**

| Front label | Indicator                   | Colour, pattern                                 | Module status   |
|-------------|-----------------------------|---|---|
| 1 2 3 4     | Relay 1 – 8                 | Green   | The relay is activated (C and NO terminals connected)   |
| 5 6 7 8     |                             | Yellow  | The relay has an internal fault                         |
| PS COM      |                             | None  | The relay is deactivated (C and NC terminals connected) |
| G005375     | PS                          | Green   | Power OK  |
|             | (Power Supply)              | Yellow  | Power Fault   |
|             | COM<br>(Communication)      | Green   | Communication OK  |
|             |                             | Green, flashing                                 | Communication OK, module not configured                 |
|             |                             | Yellow  | Communication fault                                     |
|             | PS + COM                    | PS = Yellow, flashing<br>COM = Green            | Boot-loader mode  |
|             | PS + COM<br>(both flashing) | PS = Yellow, flashing<br>COM = Yellow, flashing | Boot-loader mode, Firmware download in progress         |
|             | PS + COM                    | PS = Yellow, flashing<br>COM = None             | Safe State (module is not functional)                   |

## Module Dimensions (mm)



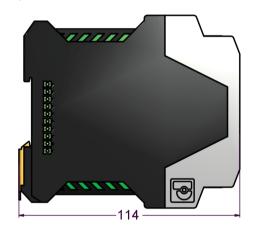

G000209

### Mounting

Mount the module on a horizontal 35 mm DIN rail.

**©** Consilium