1(6) DATA SHEET



# Base Adapter IP-ADAPT

Part no. 5100775-00A

G016846

System: All Salwico Fire Alarm Systems

## General Description

IP-ADAPT is an adapter that is to be used with IP-BASE (part. no. 5100774).

Smoke, heat, and flame detectors can be connected to this adapter:



#### NOTE!

For more information about suitable bases and detectors, see separate document "Base matrix".

The adapter can be used for all Consilium fire alarm systems.

#### Data

Cable terminals 2.5 mm<sup>2</sup>


Ingress protection IP66/IP67 (for base adapter

when mounted on base)

 $\begin{array}{ll} \mbox{Material} & \mbox{PA66} + \mbox{FR} \\ \mbox{Colour} & \mbox{White} \\ \mbox{Weight} & \mbox{140 g $\pm 5\%$} \end{array}$ 

#### Mounting

The base adapter is attached to the detector base IP-BASE with a bayonet mount. Turn the adapter in a clockwise direction and make sure the snap lock connector (1) snaps in place with a clicking sound.

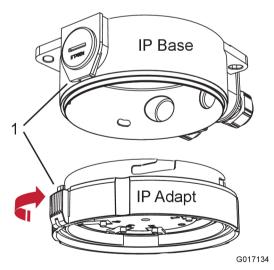



#### Hint!

As an option, the snap lock can be further secured with a screw in order to prevent removal of the adapter from the base.

DATA SHEET 2(6)


To open the adapter, release the snap lock by pressing it inwards against the adapter, then turn the base in a counterclockwise direction.






#### Hint!

Use a 5 mm screwdriver or similar as a lever, inserting it in the hole (2) to give extra force when turning.

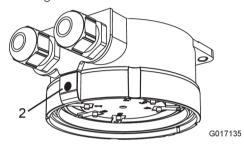

### Securing the detector head


The locking screw (3) secures the base adapter with the detector head. Turn the screw counterclockwise until the screw is level with the rim of the base adapter. See detail with cross-section view below.

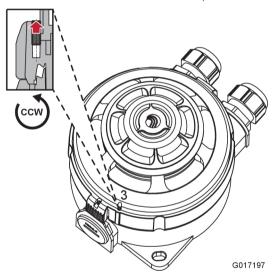

3(6) DATA SHEET

#### Connections

Connection of addressable detectors CD-PH Ex ia/ic

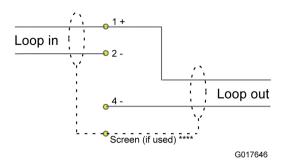


Connection of addressable detectors IA, OA, TDT and EV-PP series:




#### NOTE!

 The connection is the same as for UB-6.



G016869

 
Connection of addressable detectors NS, CN and EV-series\*\* (EV-PP, CN-PS and CN-PYS excluded):



Remote output

G016870

 
Connection of addressable detectors EV series with SCI (EV-PP excluded):



Remote output

G026448

 
Connection of conventional detectors DIS3, DOS3 and HC100:



G016871

DATA SHEET 4(6)

#### Connection of conventional detectors EVC-series (EVC-PY-IS excluded):

 


G016872




#### NOTE!

If the cable screen is to be used, it must be connected to the designated screw in the IP BASE.


#### Connection of addressable detector NS-AOHS-IS:

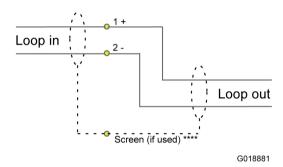

#### Connection of addressable detector CS-PH Ex:

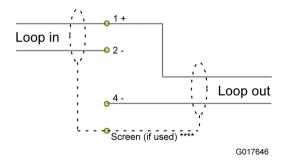

#### Connection of addressable detector CS-PYH:

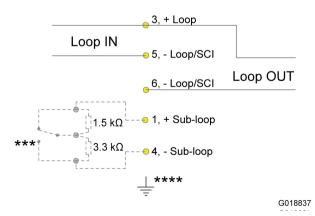


5(6) DATA SHEET

\* All types of detectors do not have the remote output. Please refer to the data sheet for the detector in question.

- \*\* For loop units with short circuit isolators, see connection on data sheet for that unit.
- \*\*\* Connection example for input
- \*\*\*\* Connection for shielded cable, if shielded cable is used. Refer to next section for an example of a shielded cable connection.


# Example of shielded cable connection

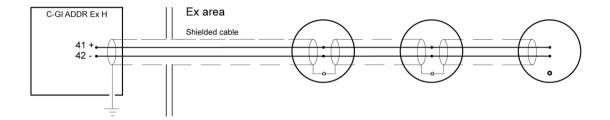


G018954

DATA SHEET 6(6)

# Dimensions (mm)

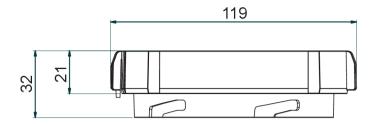

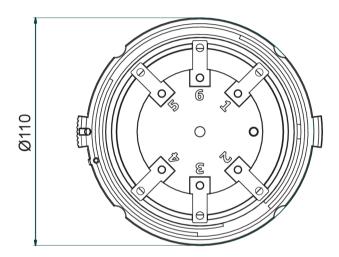

G016852